


Dromex



PREMIUM GOATSKIN LEATHER GLOVES

EN 388



4131



GGOAT

Description

Dromex® GGOAT, goats skin full grain leather gloves are designed for TIG (Tungsten Inert Gas) welding or driver glove users. Goats skin is the most durable leather, as the natural lanolin content of the hide ensures the glove is soft and supple. Consists of natural premium full grain goatskin leather, with a gunn cut, keystone thumb, and shirred cuff, reinforced with syntax thread and red cotton bound cuff trim for additional strength.

Special Instructions

Although the manufacturer has examined these gloves under the system for ensuring quality of production by means of monitoring and inspection, we recommend that all gloves should be thoroughly inspected before use to ensure no damage is present.

None of the materials or processes used in the manufacture of these products are known to be harmful to the wearer. The gloves and information contained herein are designed to accommodate the basic safety requirements and standards for Personal Protective Equipment. Actual conditions of use cannot be directly simulated in a test environment, therefore it is the responsibility of the user and not the manufacturer or supplier to determine the suitability for intended use.

Compliance & Conformity

Performs equivalent to the standard EN 420 for innocuousness, pH value >3,5 <9,5, Chromium VI in leather shall not exceed 3,0 mg/kg and the size is correct and EN 388 for compliance with directive 89/686/EEC Mechanical Risks (4,1,3,1).

Specifications

Style: Gunn cut, keystone thumb
 Liner: NIL
 Palm: Full grain goat leather, 1mm ± 5%
 Back: Full grain goat leather, 1mm ± 5%
 Cuff: Shirred with red cotton bound cuff trim
 Mass: ± 63g per pair (size XL)

Packaging, Storage & Obsolescence

Packed 10 pairs per bundle and 200 pairs per carton for shipping. Store in a cool, dry place. Stored correctly, the gloves physical properties will not change for up to three years.



Cleaning & Maintenance

Gloves should not be left in a contaminated condition if re-use is intended especially if potential hazards exist. Before removal from the hands excess contaminant should first be removed from the gloves. Should this not be possible, it is advisable to ease left and right hand gloves off using the gloved hand and remove the gloves without the contaminant contacting the bare hands.

How to decontaminate your leather glove.

Under no circumstances should leather submerged in water.

1. Prepare a lukewarm water solution using mild detergent.
2. Gently wipe your leather glove with a cloth.
3. In-order to reduce stiffening, allow the leather glove to dry naturally.

Disposal

All industrial waste should be disposed of correctly according to local regulations and good disposal practice. Gloves should be disposed of considering the hazardous substances they were used for. Please consider recycling.

Sizes Available


Code	Size	Palm Length
GGOAT-8A	S/M	100mm (±5mm)
GGOAT-9A	M/L	105mm (±5mm)
GGOAT-10A	L/XL	110mm (±5mm)
GGOAT-12A	XXL/XXXL	120mm (±5mm)

* As per the EN420 standard, actual measurement of gloves are determined by the manufacturer, taking into account the behaviour of the glove material, its thickness (such as leather gloves, PVC gloves etc), elasticity and the intended use.

* Sizing charts only serve as a guide. Sizes and measurements are for reference only. In order to make an informed decision, always try on the gloves as each glove features a unique construction to accommodate a wearer's preferences.

Marking

Measurement Guide

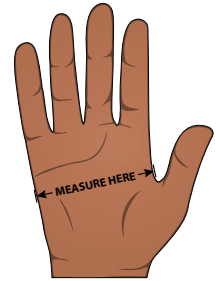

1. Winged thumb
2. Gunn cut
3. Keystone thumb
4. Shirred cuff