

Dromex



KIDNEY BELT



KBELT

Description

Dromex® industrial use kidney belt is a wide elastic band that is placed around the lower torso, wrapping firmly around the lower waist, intended to protect a person's internal organs from damage resulting either from strain or shock whilst working.

Dromex® kidney belt features the following:

- A 20cm, broad elastic kidney support
- Three flexible supports in the back area
- Double stitching re-enforcing closures
- Hook and Loop closure
- Washable

Kidney belts do not restrict breathing and force a straight upper body position. Kidney belts also serve the worker as a reminder to avoid awkward postures and heavy loads, reduce bending motions and essentially reducing injuries in certain workplaces.

Please note that this belt is not intended for extreme sport, weight lifting or other high impact work. The wearer should ascertain if the belt is suitable for the intended use. The user should ensure that the correct training regarding back and kidney support belt fitting and use is given.

Special Instructions

None of the materials or processes used in the manufacture of these products are known to be harmful to the wearer. The manufacturer has examined under the system for ensuring quality of production by means of monitoring and inspection. These belts are designed to accommodate the basic safety requirements and standards for Personal Protective Equipment. The information contained herein is intended to assist the wearer in the selection of personal protective equipment. Actual conditions of use cannot be directly simulated in a test environment therefore it is the responsibility of the end user and not the manufacturer or supplier to determine the apron suitability for the intended use. All belts should be thoroughly inspected before and after use to ensure no damage is present. Do not use this product for extreme sports, such as motor cycle riding and weight lifting at gym/training. Do not use this product near moving machines or where there is a risk of entanglement.

Compliance & Conformity


N/A.

Specifications

Style: Black, torso, 200mm wide kidney belt with back support and Hook and Loop closure
Fabric composition: 100% Polyester and leatherette
Back support: Polyester
Closure: Hook and Loop closure

Packaging, Storage & Obsolescence

- KBELT is packaged in a re-sealable poly bag, sold as 50 units.



Cleaning & Maintenance

Kidney belts should not be left in a contaminated condition if re-use is intended especially if potential hazards exist. This belt should be decontaminated before storage and re-used as indicated below:

- Brush excess dirt and contaminant off
- Wipe with a damp rag, soaked in mild detergent
- We recommend that no bleaching, oxidising ingredients or any fabric softeners be used
- Recommended method of washing is by hand at a maximum temperature of 30°C (86°F) with mild detergents
- Allow to drip dry
- Drying temperature should not exceed 70°C (158°F)


In order to maximise the belt cycle, we recommend the mildest possible cleaning conditions in terms of temperature and chemicals used.



Sizes Available

Small to 2X Large

| SIZE | A - mm |
|------|--------|
| S | 930 |
| M | 1030 |
| L | 1150 |
| XL | 1250 |
| 2XL | 1300 |

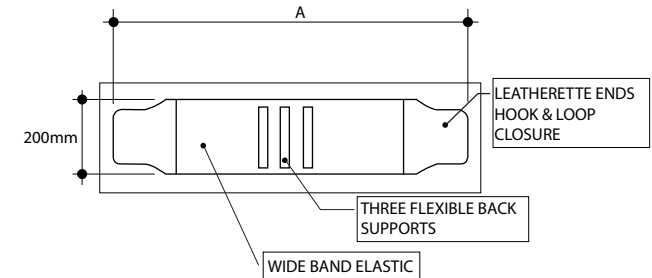

Disclaimer

Dromex reserves the right to make changes without further notice to any products herein to improve function, design or reliability and validity. Dromex does not assume any liability arising out of the application or use of any product described herein. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

Latest update: 15/08/2024